


FreeNet Antennas

Instructions

CFD400 Clamp Connectors

Cut cable as shown at left.
Dimensions in mm.

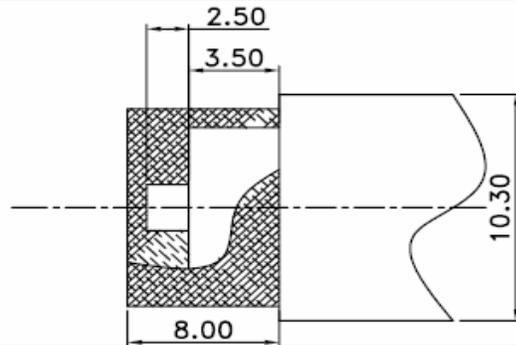

Install parts over cable as shown below.



Fold braid back over the ferrule.
Solder pin onto center conductor



Slide barrel over cable, and tighten nut.