


# FreeNet Antennas

## Waveguide Mounting

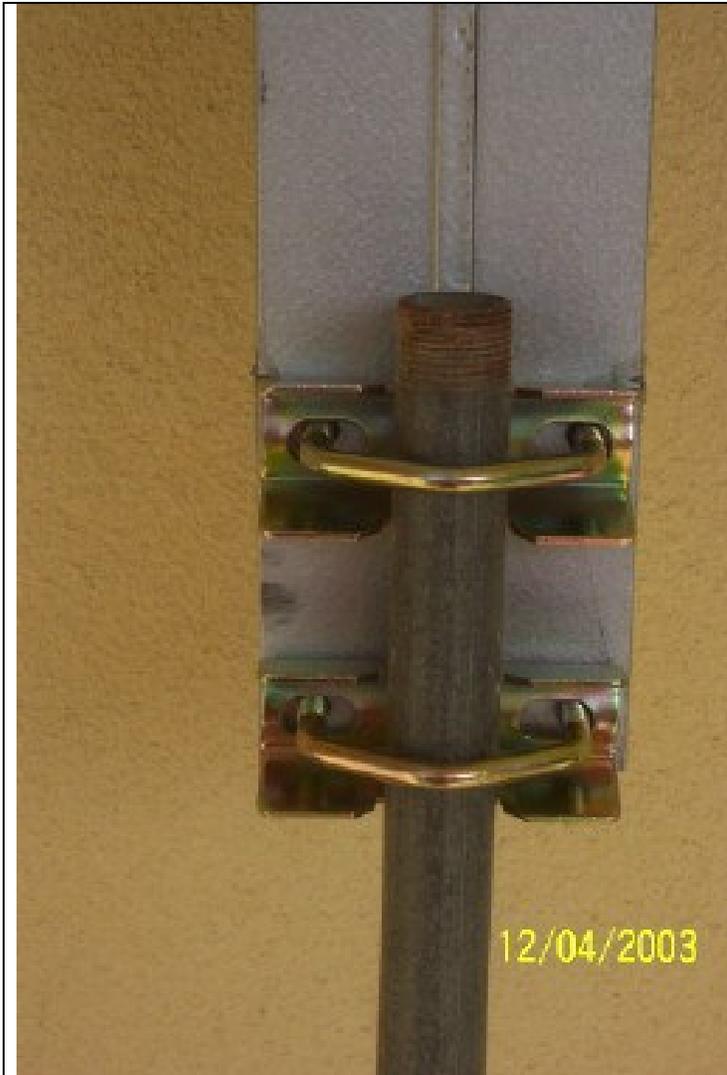

- The V-clamps go on the outside of the 'back' of the antenna. The back is the side with the folded seam. The front has the N-type connector.
- The nuts and washers go inside.
- You will need a 12mm ring spanner to tighten the nuts – especially the upper two nuts that are close to the 'lower reflector' (flat metal piece).
- Do not deform the lower reflector. It should remain as flat as possible – it is part of the antenna.
- Do not seal the gaps around the lower reflector. You want any water/condensation that gets inside the antenna to drain out.